



EasyTalk™ Wireless USB Mic System

Part Numbers:

999-8550-000 North America
999-8550-001 International

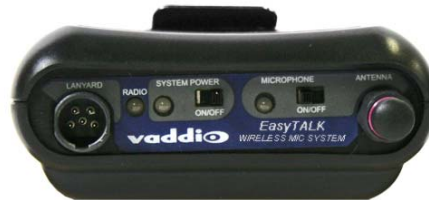




Table of Contents

Overview:.....	3
Unpacking:.....	4
Diagram: The Front Panel Controls:.....	4
Diagram: The Rear Panel Connections:	5
Table: Dip Switch Settings and Descriptions	6
Diagram: Belt Pack Control Panel.....	7
Belt Pack and Battery Compartment:.....	8
Diagram: Belt Pack Views	8
Table: Belt Pack Dip Switch Settings:	9
Belt Pack Configuration Settings:	9
Step by Step Instructions.....	10
Diagrams: Basic Configurations	11
Technical Specifications	11
Compliance and CE Declaration of Conformity:	12
Warranty Information:	13
Appendix 1: Pin-outs and Stuff.....	14
EasyTalk Audio User Serial Command Set:	14
Table: Command Set	14
Help Menu:.....	15

Overview:

The EasyTalk Wireless USB Mic System expands audio capabilities for live voice reinforcement with its analog outputs or lecture capture with its USB 2.0 digital audio output plugged directly into a computer. Key features of the EasyTalk Wireless Audio Interface include:



- HD Wireless Link with Adaptive Frequency Hopping (AFH) for interference free operation.
- USB Audio Output allowing connection to a PC for UC Soft-client Applications or Lecture Capture systems.
- Rechargeable Belt Pack transmitter that features a lithium-ion battery pack for extended hours of operation.

The system consists of a Belt Pack Transmitter, Lavalier Microphone and Wireless Receiver. The EasyTalk Wireless Receiver works in conjunction with the Belt Pack Transmitter and Lavalier Mic worn by the presenter to send the presenter’s speech to the room’s audio reinforcement, system conferencing system or lecture recording software. The wireless link uses Adaptive Frequency Hopping (AFH) technology supporting the transmission of full bandwidth audio digitally to the receiver.

The receiver has a balanced or unbalanced line level output for connection to an amplifier, videoconferencing codec or other room A/V equipment. In addition, the receiver has a USB audio output that can be directly connected to a PC emulating a microphone and speaker device for use with Unified Communication clients such as Skype®, Jabber®, Microsoft Lync® or Lecture Capture Systems like Panopto®, Tegrity® and others. Both the USB audio and the analog audio can be used simultaneously. Front panel controls allow the user to mute or adjust output volume level. The back-panel GPIO is used for volume and mute functions that can be wired to external control systems.

The Belt Pack houses the 2.4 GHZ frequency hopping radio capable of transmitting full spectrum audio (20HZ to 20KHZ). Advanced radio protocols such as adaptive frequency hopping and forward error correction ensures reliable communication and coexistence with other devices in the band. The Belt Pack includes a rechargeable lithium-ion battery pack allowing extended operations. Charging is accomplished with a micro-USB power supply or by simply plugging it directly into a USB port on a PC.

The EasyTalk Wireless USB Mic System incorporates user selectable digital signal processing (DSP) functions to meet application requirements associated with the room. Functions include Automatic Gain Control, Speaker Equalization, Compressor, and Microphone Filtering. Collectively, the EasyTalk Wireless USB Mic System adds pristine sound quality to any audio or recording system.

Intended Use:

Before operating the device, please read the entire manual thoroughly. The system was designed, built and tested for use indoors, and with the provided power supply and cabling. The use of a power supply other than the one provided or outdoor operation has not been tested and could damage the device and/or create a potentially unsafe operating condition

Important Safeguards:

Read and understand all instructions before using. Do not operate any device if it has been dropped or damaged. In this case, a Vaddio technician must examine the product before operating. To reduce the risk of electric shock, do not immerse in water or other liquids and avoid extremely humid conditions.



Use only the power supply provided with the system. Use of any unauthorized power supply or extending the DC side of the power supplies will void any and all warranties.

Save These Instructions:

The information contained in this manual will help you install and operate your product. If these instructions are misplaced, Vaddio keeps copies of Specifications, Installation and User Guides and most pertinent product drawings for the Vaddio product line on the Vaddio website. These documents can be downloaded from www.vaddio.com free of charge.

Unpacking:

Carefully remove all of the parts for the EasyTalk Wireless USB Mic System from the packaging.

999-8550-000 for North America includes:


- One (1) 998-8550-000 EasyTalk Wireless Receiver
- Two (2) Rack Ears for Rack Mounting the Receiver
- One (1) 2.39GHZ-2.51GHz ½-Wave, 3.5" RP-SMA Right Angle, Antenna
- 12 VDC, 1.0 Amp PowerRite™ Power Supply with North American Power Cord
- One (1) 6' (1.83m) USB 2.0 Cable Type A-Male to Type B-Male
- One (1) EasyTalk Belt Pack Transmitter with Rechargeable Lithium-ion battery and attached belt clip
- One (1) 1" (1/4 wave) RP-SMA straight antenna for the Belt Pack Transmitter
- One (1) 5 VDC Micro-USB Charger for North America
- One(1) UB 2.0 Charger Cable Type A-Male to Micro-B-Male
- AT (audio-technica) Unidirectional Lavalier Condenser Mic terminated with 5-pin XLR
- Mic Windscreen and Clothing Clip Included
- Manual (Installation and User Guide)



999-8550-001 for International use includes:

- One (1) 998-8550-000 EasyTalk Wireless Receiver
- Two (2) Rack Ears for Rack Mounting the Receiver
- One (1) 2.39GHZ-2.51GHz ½-Wave, 3.5" RP-SMA Right Angle, Antenna
- 12 VDC, 1.0 Amp PowerRite Power Supply
- One (1) Euro Power Cord
- One (1) UK Power Cord
- One (1) 6' (1.83m) USB 2.0 Cable Type A-Male to Type B-Male
- One (1) EasyTalk Belt Pack Transmitter with Rechargeable Lithium-ion battery and attached belt clip
- One (1) 1" (1/4 wave) RP-SMA straight antenna for the Belt Pack Transmitter
- One (1) 5 VDC USB Charging Supply for Europe
- One (1) 5 VDC USB Charging Supply for UK
- One (1) USB 2.0 Charger Cable Type A-Male to Micro-B-Male
- AT (audio-technica) Unidirectional Lavalier Condenser Mic terminated with 5-pin XLR
- Mic Windscreen and Clothing Clip Included
- Manual (Installation and User Guide)


Diagram: The Front Panel Controls:

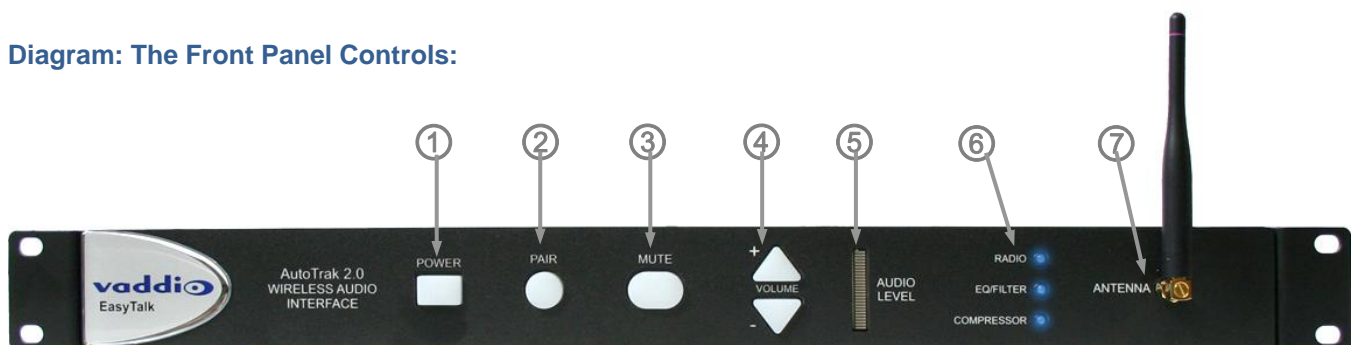

- 1) **Power ON/OFF:** This switch turns the power for the EasyTalk Wireless Receiver on or off. When the button's blue LED is lit, the system is on ready for operation.
- 2) **Pair:** This button initiates the automatic pairing for the Belt Pack Radio Transmitter and the Wireless Audio Receiver. Pairing is the matching of the same AFH sequence for both devices.
- 3) **Mute:** This control mutes (turns off) the audio outputs of the EasyTalk Wireless Receiver.

- 4) **Volume:** The + (plus) and – (minus) buttons are used to raise and lower the audio outputs (Balanced and Unbalanced) from the EasyTalk Wireless Receiver.
- 5) **Audio Level:** This LED display ladder will indicate the relative audio level output (from all sources) of the EasyTalk Wireless Receiver. The red line at the top of the display indicates clipping.
- 6) **Radio, EQ Filter and Compressor Status LED's:**
 - **Radio LED:** Solid blue light indicates normal operation. Fast flashing indicates no link established with the Belt Pack Wireless Microphone. Slow flashing indicates the Pairing cycle is in progress.
 - **EQ Filter:** Blue light on indicates the EQ Filter is turned on. Blue light off indicates the EQ Filter is off. When EQ Filter is enabled, it helps increase speaker intelligibility for voice applications.
 - **Compressor:** Solid blue indicates that the Compressor is on. No light indicates that the Compressor is off. The Compressor minimizes the potential of “clipping” by attenuating the audio signals that exceed the maximum input.
- 7) **Antenna:** The antenna is tuned to receive 2.4 GHZ signals from the IR Lanyard Belt Pack Microphone. Note: If the EasyTalk Wireless Receiver is installed deep inside a metal equipment rack or is surrounded by other metal cased equipment, the antenna may need to be extended away from the rack to improve reception.

Diagram: The Rear Panel Connections:

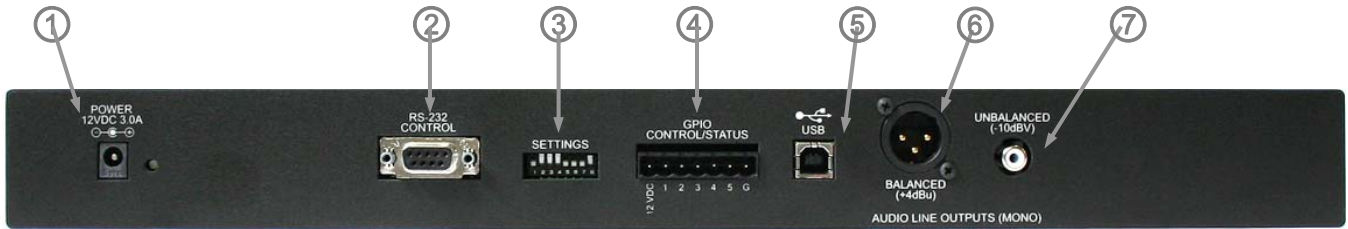

- 1) **12 VDC, 1.0 Amp Power Connector:** The 5.5mm OD and 2.5mm ID coaxial power connector should be plugged into the PowerRite power supply provided by Vaddio. Use of any unauthorized power supplies will void any and all warranties.
- 2) **RS-232 Control:** The DE-9 female (DB-9 for conventionalists) connector is provided for 3rd party control systems using the Wireless Audio Interface Application Protocol Interface (API). See the Command List in Appendix A.
- 3) **Settings (8-Position Dip Switch):** The eight position dip switch is used for system configuration of the EasyTalk Wireless Receiver (see next page for table).

4) **GPIO Port:** The GPIO Port provides the ability to interface with external control systems. Inputs are logic level low. The outputs are open collectors.

Pin	Function
1	Power (12 VDC)
2	Mute Toggle (Input)
3	Mute Status (Output)
4	Volume Up (Input)
5	Volume Down (Output)
6	Not Used
7	Ground

- 5) **USB Type B Connector:** This connector is used to interface with the Host PC for soft-client codec type applications.
- 6) **Audio Outputs:** There are two (2) Audio Outputs on the rear panel:
 - **Balanced Audio Output Jack:** Balanced Line Level (on XLR - M connector) +4dBu
 - **Unbalanced Audio Output Jack:** Unbalanced Line Level (on RCA-F connector) -10dBV


Table: Dip Switch Settings and Descriptions

Dip Switch #	Function
1	ON/OFF - Enable/Disable - Compressor for the Balanced and Unbalanced Audio Outputs
2	ON/OFF - Enable/Disable - Speaker EQ Filter
3	ON/OFF - USB Conference Mode (Skype-type PC applications)
4	ON/OFF - ON Enables Radio, OFF Disables Radio
5	ON/OFF - Baud Rate Selection: 9600-Off/38.4K-On (Use 9600bps for most all applications)
6	ON/OFF - Front Panel Locked Out when ON
7	ON/OFF - ON allows full Serial control bypassing dip switches 1, 2, 3, 4, and 8
8	Not Used

- **Dip Switch 1 - Compressor:** Enable adds a Dynamic Range Compressor for the Audio Line Level Outputs (balanced or unbalanced). Disable turns it off.
- **Dip Switch 2 - Speaker EQ Filter:** Enable adds a specialized output filter for improved intelligibility for voice applications. Disable turns it off.
- **Dip Switch 3 - ON Position/USB Conference Mode:** Enable (Dip Switch 3 On) creates the desired audio mixing (Near and Far ends) for USB conferencing applications such as Skype, Jabber, Lync etc... In the USB Conference Mode, the PC USB Speaker Audio is sent to the balanced and unbalanced audio line outputs, which allows the Far End Audio to be presented in the room. The Belt Pack Wireless Microphone Audio is also sent to the PC and the Far End. The EasyTalk Wireless Receiver will also be recognized as a USB Audio Device by the PC with recording (the Belt Pack Wireless Microphone Audio) and playback (the Speaker Audio) capabilities. Disable turns the USB Conference Mode off.
- **Dip Switch 3 - OFF Position/USB Record Mode:** Disable (Dip Switch 3 Off) creates a USB Record Mode for PC Audio Recording (PC requires Audio Recording Software-not included) and Playback through the USB port (Audio output through the Balanced or Unbalanced Audio Line Outputs). The EasyTalk Wireless Receiver will be recognized as a USB Audio Device by the PC with recording (the Belt Pack Wireless Microphone Audio) and playback (the Speaker Audio) capabilities.
- **Dip Switch 4 - Radio ON/OFF:** ON enables the Radio Receiver for the Wireless Microphone. OFF turns it off, naturally.
- **Dip Switch 5 - Baud Rate Selection ON/OFF:** OFF sets the Baud Rate to the default 9600bps. ON sets the Baud Rate to 38400bps. For most applications 9600bps will do.
- **Dip Switch 6 - Front Panel Buttons Lock ON/OFF:** ON locks the Front Panel Buttons and disables the buttons from functioning. OFF allows the front panel buttons to be used.
- **Dip Switch 7 - Software Control ON/OFF:** When ON, dip switches 1, 2, 3, 4, and 8 are ignored to allow full serial control of the audio interface.
- **Dip Switch 8 - Resets to Factory Defaults ON/OFF:** When ON and power is plugged in, the interface is set to factory defaults. Leave OFF for normal operation.

Diagram: Belt Pack Control Panel



- 1) **Lav Mic Cable Connector (5-pin mini XLR - M):** Plug the cable attached to the Lanyard into the 5-pin mini XLR connector.
 - 2) **Radio:** This LED indicates an active radio link with the EasyTalk Wireless Receiver. Solid blue LED indicates connection with the EasyTALK Wireless Receiver. Flashing blue LED indicates radio link has been lost.
 - **Note:** Radio link operates up to 100 feet line of sight from the Belt Pack Transmitter to the EasyTalk Wireless Receiver.
 - 3) **System Power:** To use the Belt Pack or IR Lanyard, turn the SYSTEM POWER switch to the on position and the LED will illuminate. Be sure to turn off the SYSTEM POWER switch when the system is not in use to save the battery life. The rechargeable lithium-ion battery pack provides up to ten (10) hours with full charge.
-  It is highly recommended that the Rechargeable Lithium Ion Battery Pack be fully charged prior to using the Belt Pack for the first time!
- 4) **Microphone ON/OFF:** This switch turns the wireless microphone on or off at the Belt Pack allowing the presenter to use an existing room system microphone instead, or for momentary microphone muting.
 - **Note:** The System Status light on the EasyTalk Wireless Receiver will light if the microphone signal is detected. If the Microphone is turned off at the Belt Pack, the System Status light will not light.
 - 5) **1" ¼-Wave Antenna:** Used to transmit the wireless microphone audio back to the EasyTalk Wireless Receiver.

Belt Pack and Battery Compartment:


Diagram: Belt Pack Views



- 1) **Removable Battery Compartment Cover:** To open, carefully press down at the top of the removable battery cover near the center of the small opening and slide the cover downward. To replace the removable battery cover, start sliding the cover on at the bottom of the battery pack compartment and slide cover upward to the top to the small opening until the cover latches in place.
- 2) **Micro-B USB Charging Port:** The Belt Pack rechargeable battery can be charged by the micro-B USB connector on the bottom side of the belt pack enclosure. A USB charger is included with the Belt Pack. The Belt Pack can also be recharged by using a micro-B USB to USB adapter which can be connected to a PC or Laptop USB port for recharging. Use only the charging power supply provided.
- 3) **Dip Switches:** There are two (2) 4-position dip switches located on the circuit board, SW4 and SW5. They provide configuration settings for Microphone Gain Control, Filtering, Compression and Microphone Filtering and Pairing of the Wireless Belt Pack to the EasyTalk Wireless Receiver.
- 4) **Rechargeable Lithium-Ion Battery:** The battery is housed and attached inside the Battery Compartment and under normal use should last up to ten (10) hours when fully charged.
- 5) **Battery Indicator LED:** The Battery Indicator LED is located on the bottom of the Belt Pack.
 - a. **When the USB charger is not connected to the Belt Pack:** The Battery Indicator LED will be off when battery power is adequate for the Belt Pack. The Battery Indicator LED will blink red indicating that the battery power is low and needs to be recharged soon.
 - b. **When the USB charger is connected to the Belt Pack:** The Battery Indicator LED will be yellow when the battery is charging. The Battery Indicator LED will be green when the battery is fully charged. Average charging time from dead battery to full charge is 10 hours.
- 6) **Radio Pairing Button SW3:** Push this button in conjunction with the Pairing button on the front panel of the Optional Wireless Receiver to “pair” the transmitting Belt Pack with the Receiver.

Table: Belt Pack Dip Switch Settings:

Switch Number	Dip Switch Function
Switch Set 4 (SW4)	
1	Not Used
2	ON/OFF - IR LED's in Lanyard
3	ON/OFF - Radio in Belt Pack <i>*Turn off when not using Optional EasyTalk Wireless Receiver</i>
4	Clear Pairing (pairing is required for proper operation)
Switch Set 5 (SW5)	
1	ON/OFF: ON adds 3dB Gain Boost on Microphone
2	ON/OFF: ON adds 6dB Gain Boost on Microphone
3	ON/OFF: ON adds 9dB Gain Boost on Microphone
4	ON/OFF: Automatic Gain Control Mode

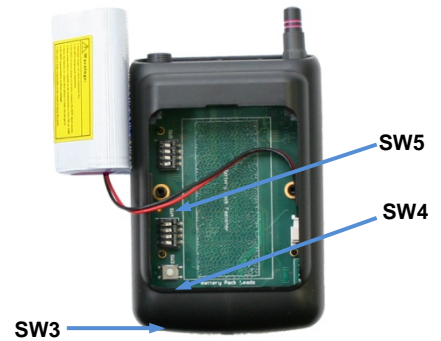

Belt Pack Configuration Settings:

The Belt Pack has a number of custom settings that can be enabled or disabled for specific applications. These settings can be applied by activating dip switch settings on the two (2) 4-position dip switches SW4 and SW5 located on the Belt Pack Circuit Board.

Switch Set 4 (SW4):

- **Dip Switch 1:** Not Used
- **Dip Switch 2 - IR Transmitter:** ON enables the IR Transmitter LEDs in the IR Lanyard. OFF disables the IR Transmitters in the Lanyard and the camera tracking will not function.
- **Dip Switch 3 - Radio in Belt Pack:** ON enables the Radio circuit in the Belt Pack. OFF disables the Radio circuit.
- **Dip Switch 4 - Clear Pairing:** ON clears the pairing setting of the receiver in the Belt Pack.

Switch Set 5 (SW5):

- **Dip Switch 1:** Gain, Enable adds a three (3) dB gain to the microphone audio. Disable provides zero gain.
- **Dip Switch 2:** Gain, Enable adds a six (6) dB gain to the microphone audio. Disable provides zero gain.
- **Dip Switch 3:** Gain, Enable adds a nine (9) dB gain to the microphone audio. Disable provides zero gain.




Note: The following Gain Boost Switches, 1 through 3, can be used individually or in combination. For example, if Dip Switch 1, 3dB Gain and Dip Switch 2, 6dB Gain are both ON, they will add a total of 9 dB of gain

- **Dip Switch 4:** Automatic Gain Control ON enables an Automatic Gain Control function that maintains a constant audio level to regulate soft talkers as well as loud talkers. OFF disables the Automatic Gain Control, of course.

Step by Step Instructions

For setting up the EasyTalk Wireless Mic System:

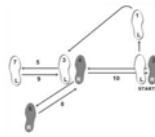

Step 1: Review the manual to eliminate any and all surprises.

Step 2: Connect the 3.5" right-angle RP-SMA antenna to the front of the receiver and connect the power supply.

Step 3: Connect the audio outputs (Balanced, Unbalanced or USB) to the audio system (not included). Set all audio levels on the audio system low to avoid any rude awakenings.


Step 4: On the Belt Pack, plug in the lavalier mic using the 5-pin XLR connector and turn the System Power and the Microphone switches to the ON position.



Step 5: Touch the Power button on the EasyTalk Wireless Receiver Audio and the back-lit blue LED power switch will illuminate.

Step 6: To “Pair” the Belt Pack with the Receiver, carefully press down at the top of the removable battery cover near the center of the small opening and slide the cover downward. Switch #3, marked SW3 on the circuit board next to the battery is the pairing button (see figure on the right).

- Place the Belt Pack in close proximity to the EasyTalk Wireless Receiver.
- Press the SW3 button and release. The Radio LED on the Belt Pack front panel will begin blinking at a slow rate.
- Press the Pair Button on the front panel of the EasyTalk Wireless Receiver.
- The Belt Pack and the EasyTalk Wireless Receiver will automatically sync with each other. The blue Radio LED’s on the Belt Pack and the EasyTalk Wireless Receiver front panels will illuminate solid blue indicating they are paired and ready for operation

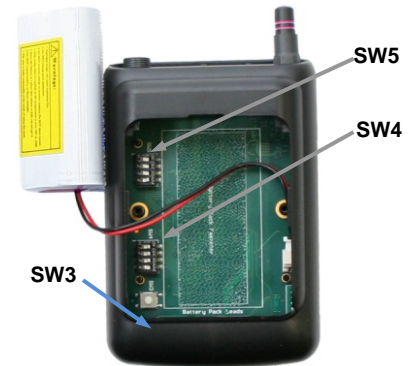

Important Note: The Pairing button on the EasyTalk Wireless Receiver must be pushed within ten (10) seconds of pressing the pairing button SW3 on the Belt Pack or pairing will not occur.

Step 7:

To replace the removable battery cover, start sliding the cover on at the bottom of the battery pack compartment and slide cover upward to the top of the small opening until the cover latches back into place.

Step 10: Adjust the volume by using the + (plus) and – (minus) buttons on the front panel of the Wireless Receiver and set the audio levels on the audio system to taste. The LED ladder will act as an LED meter and as a way to set the levels when the volume buttons are touched and held. Test the mic ON/OFF switch on the Belt Pack and also the Mic Mute switch on the Audio Interface for proper operation.

Step 11:

Set the Dip Switches on the Back Panel of the Audio Receiver and on the inside of the Belt Pack for the requirements of the application.

Other Notes:

- If the System Power LED on the Belt Pack flashes, then the battery is low and a battery charge is required.

Diagrams: Basic Configurations



Technical Specifications



EasyTalk Wireless USB Mic System	
Part Numbers	EasyTalk Wireless USB Mic System 999-8550-000 (North America) EasyTalk Wireless USB Mic System 999-8550-001 (International)
Audio Specifications	Frequency Responses: 20 HZ to 20KHZ Dynamic Range: >75dB THD + Noise: <.02%
Analog Line Output	Connector: XLR (Balanced) & RCA (Unbalanced) Impedance: 50 ohm (Balanced) & 10Kohm (Unbalanced) Nominal Level: +4dBu (Balanced) & -10dBu (Unbalanced)
USB Audio Interface	Connector: Type B Male Type: USB 2.0 Compliant PC Controls: Mute & Volume
Microphone	Type: Unidirectional Condenser Microphone Frequency Response: 100HZ to 12KHZ Max Input Level: 115dB SPL
Radio Link	Type: Adaptive Frequency Hopping Frequency Range: 2400 to 2483 Antenna: Monopole Maximum Power Output: 5dBm Receiver Sensitivity: -83dBm
Audio Processing Settings	8-Position Dip Switch for Compressor, Speaker EQ Filter, Mix Mode
User Controls	Power Button, Volume Up/Down, Microphone Mute, Pairing Button, LED Indicators, VU Meter
GPIO	Inputs: Mute Control, Volume Up, Volume Down (Active Logic Low) Outputs: Mute Status
Belt Pack Battery	Type: 4400mAh Lithium-Ion Typical Talk Time : > 18 hours Typical Full-Charge Time: @ 9 hours (from dead battery)
Receiver Power Supply	Connector: 5.5mm OD X 2.5mm ID coax receptacle Supply: 12 VDC, 1.0 Amp
Serial Control Protocol	RS-232 (Firmware Updates & ASCII Control)
General Information	
Operating Temperature	32° to 104° F (0° to 40° C)
Power Consumption	Maximum 12 watts
Dimensions (H x W x D)	1.72" (43.68mm) H X 18.93" (480.82mm) W X 6" (152.4mm) D with rack ears attached
Weight	3.3 lbs. (1.5 kg)

Compliance and CE Declaration of Conformity: EasyTalk Wireless Receiver and Belt Pack Transmitter

Compliance testing was performed to the following regulations:

- | | |
|--|---------|
| • FCC Part 15 Subpart B | Class A |
| • FCC Part 15, Subpart C Section 15.247 | Class A |
| • FCC Part 15, Subpart C Section 15.207 | Class A |
| • Industry Canada RSS-210 Issue 8 | Class A |
| • Industry Canada RSS-Gen Issue 3 | Class A |
| • IEC 60950-1/A1: 2009 | Safety |
| • ETSI EN 300 328 V1.7.1 | Class A |
| • EN 55022 A: 2010 (CISPR 22, 2008, Modified) | Class A |
| • ICES-003, Issue 4: 2004 | Class A |
| • EN 55022 A: 2010 | Class A |
| • AS/NZS CISPR 22: 2009 +A1:2010 | Class A |
| • VCCI V-3/2011.04 | Class A |
| • EMC Directive 2004/108/EC | Class A |



FCC Part 15 Subpart B, Subpart C, Section 15.249 Compliance and Industry Canada RS-210 Compliance

- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart C of the FCC Rules and RS-210 of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.
- Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.
- Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.
- Do not use any antenna other than the one provided on the unit.
- This equipment complies with the FCC/IC radiation exposure limits set forth for portable transmitting devices operating in an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance



**ICES-003 Compliance
ICES-003, Issue 4: 2004**

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:

EMC Directive 2004/108/EC

- **EN 55024: 2010**
 - EN 61000-4-2: 2009
 - EN 61000-4-3: 2006 + Amendments A1: 2008 + A2: 2010
 - EN 61000-4-4: 2004 + Corrigendum 2006
 - EN 61000-4-5: 2006
 - EN 61000-4-6: 2009
 - EN 61000-4-8: 2010
 - EN 61000-4-11 Second Edition: 2004

Radio and Telecommunications Terminal Equipment Directive 1999/5/EC

- **ETSI EN 301 489-17 V2.1.1: 2009 referencing ETSI EN 301 489-1 V1.2.1: 2008**
 - EN 61000-4-2: 2009
 - EN 61000-4-3: 2006 + Amendments A1: 2008 + A2: 2010
 - EN 61000-4-4: 2004 + Corrigendum 2006
 - EN 61000-4-5: 2006
 - EN 61000-4-6: 2009
 - EN 61000-4-11 Second Edition: 2004
 - ISO 7637-2 Second Edition: 2004 + Amendment A1: 2008 - Test not applicable for base station equipment

Warranty Information: (See Vaddio Warranty, Service and Return Policies posted on vaddio.com for complete details):

Hardware* Warranty: One year limited warranty on all parts. Vaddio warrants this product against defects in materials and workmanship for a period of one year from the day of purchase from Vaddio. If Vaddio receives notice of such defects during the warranty period, they will, at their option, repair or replace products that prove to be defective. Please see Vaddio's Service Terms and Conditions at vaddio.com for specific details and policies.

Exclusions: The above warranty shall not apply to defects resulting from: improper or inadequate maintenance by the customer, customer applied software or interfacing, unauthorized modifications or misuse, operation outside the normal environmental specifications for the product, use of the incorrect power supply, improper installation (plugging things in wrong), improper extension of the power supply cable or improper site operation and maintenance.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty and is found to be defective. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises. Vaddio will only advance replace out of box failures or random equipment failures up to 30 days after the purchase date (not the install date).

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted through one of the following resources: e-mail support at support@vaddio.com or online at www.vaddio.com.

Return Material Authorization (RMA) Number: Before returning a product for repair or replacement, request an RMA from Vaddio's technical support. Provide a technician with a return phone number, e-mail address, shipping address, and product serial numbers and describe the reason for repairs or returns as well as the date of purchase and proof of purchase. Include your assigned RMA number in all correspondence with Vaddio. Write your assigned RMA number on the clearly on the shipping label when returning the product. All products returned for credit are subject to a restocking charge without exception.

Voided Warranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, or unauthorized repair. Cutting the power supply cable on the secondary side (low voltage side) to extend the power to the device (camera or controller) voids the warranty for that device.

Shipping and Handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. **If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.**

Products Not Under Warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

*Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Other General Information:

Care and Cleaning

Do not attempt to take this product apart at any time. There are no user-serviceable components inside.

- Do not spill liquids in the product
- Keep this device away from food and liquid
- For smears or smudges on the product, wipe with a clean, soft cloth
- Do not use any abrasive chemicals.

Operating and Storage Conditions:

Do not store or operate the device under the following conditions:

- Temperatures above 40°C (104°F) or temperatures below 0°C (32°F)
- High humidity, condensing or wet environments
- In inclement weather
- In costal estuaries, dry river beds, shooting ranges or house boats
- Dry environments with an excess of static discharge
- Under severe vibration

Appendix 1: Pin-outs and Stuff



RS-232 Control: DE-9 Female (DB-9 for convention):

<p>Communication Specification Communication Speed: 9600 bps or 38,400 Stop bit: 1 Data bits: 8 Parity: None No Flow Control</p>	<p>Control Port - RS-232 on DE-9 Female Connector</p> <table border="1"> <thead> <tr> <th>PIN#</th> <th>Signal</th> </tr> </thead> <tbody> <tr> <td>2)</td> <td>TXD</td> </tr> <tr> <td>3)</td> <td>RXD</td> </tr> <tr> <td>5)</td> <td>GND</td> </tr> <tr> <td colspan="2">All other pins - Unused</td> </tr> </tbody> </table>	PIN#	Signal	2)	TXD	3)	RXD	5)	GND	All other pins - Unused		
PIN#	Signal											
2)	TXD											
3)	RXD											
5)	GND											
All other pins - Unused												

EasyTalk Audio User Serial Command Set:

The EasyTalk Wireless Receiver has an RS-232 command interface for configuration and real-time control. This interface can be used interactively with a serial terminal emulator, or through a scripted interface without terminal emulation (command echo and prompt). DIP switch 7 on the Receiver unit controls whether configuration commands are enabled on the serial interface (switch in the up position), or whether the configuration is controlled exclusively from the DIP switches (switch in the down position). Real-time control commands are always available over the serial port.

Command echo and prompt can be enabled or disabled with the 6121 command. When enabled, commands input to the receiver are echoed back, and a '>' prompt character is output whenever a carriage return is entered. When disabled the echo and prompt characters are suppressed.

For all commands, the termination character is a carriage return (hex 0D). Response strings output by the Receiver will end with both a carriage return and a line feed (hex 0A). Input line feed characters are ignored.

“Set” commands return one of three responses: OK (4100), bad command (4199), or bad parameter (4198). “Get” commands return a response string indicating the command being responded to and the data requested. The format of a “get” response is a 4-digit response code, a space, and a two-digit hex value.

Table: Command Set

Command Response	Argument	Available w/ DIP 7 Down	Description
5101	none	Y	Get mute status
4101	00 – off	n/a	Mute status response
	01 – on		
5102	none	Y	Get volume
4102	nn		Volume response where nn is: FB : -5 dB FC : -4 dB ... FF : -1 dB 00 : 0 dB ... 29 : 29 dB
5110	none	Y	Get compressor enabled
4110	00 – disabled	n/a	Compressor enabled response
	01 – enabled		
5111	none	Y	Get filter enabled
4111	00 – disabled	n/a	Filter enabled response
	01 – enabled		

Command Response	Argument	Available w/ DIP 7 Down	Description
5112	none	Y	Get mixer enabled
4112	00 – disabled	n/a	Mixer enabled response
	01 – enabled		
5113	none	Y	Get radio enabled
4113	00 – disabled	n/a	Radio enabled response
	01 – enabled		
5120	none	Y	Get power enabled
4120	00 – disabled	n/a	Power enabled response
	01 – enabled		
6101	00 – off	Y	Set mute on or off
	01 – on		
6102	00 – down	Y	Adjust volume by +1dB or -1dB
	01 – up		
6110	00 – disabled	N	Enable/disable compressor
	01 – enabled		
6111	00 – disabled	N	Enable/disable filter
	01 – enabled		
6112	00 – disabled	N	Enable/disable USB mix
	01 – enabled		
6113	00 – disabled	N	Enable/disable radio
	01 – enabled		
6114	01	N	Reset to factory default settings
6120	00 – off	Y	Power on/off
6121	00 – disabled	Y	Enable/disable command echo and prompt
	01 – enabled		
4100	none	n/a	Command complete response
4198	none	n/a	Invalid argument response
4199	none	n/a	Invalid command response

Help Menu:

Using a terminal emulator, on the prompt line enter ? followed by a carriage return and the Help Menu will be displayed (see below).

? - This Menu

EasyTalk Wireless Receiver V01.00.0X

Compiled: 12-Apr-12 at 15:38:51

Commands:

- 5101 - Get mute status (00-off, 01-on)
- 5102 - Get volume (-16, 0 dB, 2-digit hex value: f0 is -16, f1 is -15, ff is -1, 00 is 0)
- 5110 - Get DRC enabled (00-disabled, 01-enabled)
- 5111 - Get EQ filter enabled (00-disabled, 01-enabled)
- 5112 - Get USB mix enabled (00-disabled, 01-enabled)
- 5113 - Get radio enabled (00-disabled, 01-enabled)
- 5120 - Get power on (00-off, 1-on)
- 6101 xx - Set mute status (xx: 00-off, 01-on)
- 6102 xx - Adjust volume 1dB (xx: 00-down, 01-up)
- 6110 xx - Enable DRC (xx: 00-disable, 00-enable)
- 6111 xx - Enable EQ filter (xx: 00-disable, 01-enable)
- 6112 xx - Enable USB mix (xx: 00-disable, 01-enable)
- 6113 xx - Enable radio (xx: 00-disable, 01-enable)
- 6114 xx - Enable factory defaults (x: 00-disable, 01-enable)
- 6120 xx - Power (xx: 00-off, 01-on)
- 6121 xx - Enable serial echo (xx: 00-off, 01-on)
- ? - Print command list

NOTE: commands 611x available only if DIP 7 up

Reponses:

- 4199 - Unknown command
- 4198 - Invalid argument
- 41xx yy - Successful get (5xxx), xx matches command, yy is returned value
- 4100 - Successful set (6xxx)



9433 Science Center Drive, Minneapolis, MN 55428
Toll Free: 800-572-2011 ▪ Phone: 763-971-4400 ▪ FAX: 763-971-4464
www.vaddio.com