



Things to Remember:

- *Not Included
- Cat5 not included
- Additional cameras may be added and connected via DVI or HDMI ports

- Notes:
- For IR forwarding place dip switch 3 down on HD-18 and the HD-19, dip switch 4 for the HD-20
 - Before connecting cameras, in the Cisco menu click on Admin Settings/Advanced Settings/System Unit and turn the IR setting to ON, default setting is AUTO.
 - Place IR emitter over IR receiver on front of the codec.
 - In order for presets to work properly, follow instructions at http://www.vaddio.com/library?path=d&file=technote_200-by.pdf with the PDF file, "Cisco/Tandberg Technical Notes"