

VADDIO™ WALLVIEW™ HD-19 DVI/HDMI

With Quick-Connect™ DVI/HDMI - SR with HSDS™ and the CONCEAL Wall Mounting System for the Vaddio™ HD-19 Robotic Pan/Tilt/Zoom Camera



Black Version
Part Number 999-6946-000 (North America)
Part Number 999-6946-001 (International)



Arctic White Version
Part Number 999-6946-000AW (North America)
Part Number 999-6946-001AW (International)

Quick-Connect DVI/HDMI SR Interface

PN: 998-1105-018





Inside Front Cover - Blank

Overview:

The WallVIEW HD-19 HD PTZ camera and Quick-Connect DVI/HDMI EZCamera™ Cat-5e cabling system using HSDS™, is a system that allows for easy installation and integration of a camera system capable of simultaneous HD analog YPbPr and composite (CVBS). The HD-19 camera is built around a 1/3-type high-speed Exmor CMOS image sensor with a total of 1.3 Megapixels and a 19X optical zoom lens, making it the ideal choice for a wide range of high definition video applications including, 720p, 1080i or 1080p.

Because the camera module is built around a new, high speed CMOS image sensor with an increased pixel aperture size, high frame rate, high signal to noise while using the column-parallel A/D conversion method, the resolution, saturation and the sensitivity of the sensor is increased. The HD-19 achieves improved picture quality even in low light environments requiring a minimum illumination rated at an astonishing 0.7 LUX (F1.6 - 50IRE).



**WallVIEW HD-19 PTZ Camera
and CONCEAL Wall Mounting
System**

The WallVIEW HD-19 is available in Black and in Arctic White and is equipped with a slip-clutch mechanism for smooth pan/tilt operation and control. The HD-19 outputs HD video (YPbPr at 1080p/60/59.94/50/30/25, 1080i/59.94/50, 720p/59.94/50, 480i/30fps and 576i/25fps) and SD video (CVBS at 480i/NTSC or 576i/PAL) simultaneously.

The HD-19 is paired with the Quick-Connect DVI/HDMI SR Interface, which provides power to the camera and returns HSDS video from the camera up to 100' (30.5m) over a single Cat-5e cable. The Quick-Connect DVI/HDMI features extended control functions including Daisy Chain Control Emulation (DCCE™), which allows single control port codecs to control multiple HD-19 cameras, and IR forwarding in modulated and non-modulated formats for extending the reach of the IR remotes included with today's most popular videoconferencing systems. The WallVIEW HD-19 is an exceptional camera for a wide range of HD video applications such as houses of worship, corporate boardrooms, live events and distance-learning.

Intended Use:

Before operating the device, please read the entire manual thoroughly. The system was designed, built and tested for use indoors, and with the provided power supply and cabling. The use of a power supply other than the one provided or outdoor operation has not been tested and could damage the device and/or create a potentially unsafe operating condition.

Important Safeguards:

Read and understand all instructions before using. Do not operate any device if it has been dropped or damaged. In this case, a Vaddio technician must examine the product before operating. To reduce the risk of electric shock, do not immerse in water or other liquids and avoid extremely humid conditions.



Use only the power supply provided with the system. Use of any unauthorized power supply will void any and all warranties.



Please do not use "pass-thru" type RJ-45 connectors. These pass-thru type connectors do not work well for professional installations and can be the cause of intermittent connections which can result in the RS-232 control line failing and locking up, and/or compromising the HSDS™ signals. For best results please use standard RJ-45 connectors and test all cables for proper pin-outs prior to use and connection to Vaddio product.

Save These Instructions:

The information contained in this manual will help you install and operate your product. If these instructions are misplaced, Vaddio keeps copies of Specifications, Installation and User Guides and most pertinent product drawings for the Vaddio product line on the Vaddio website. These documents can be downloaded from www.vaddio.com free of charge.

UNPACKING:

Carefully remove the device and all of the parts from the packaging.

Unpack and identify the following parts for 999-6946-000:

- One (1) ClearVIEW HD-19 HD PTZ Camera
- One (1) Vaddio IR Remote Commander
- One (1) Quick-Connect DVI/HDMI SR Interface One (1) Laird Technologies 28A2432-0A2 Clamp-on Ferrite Cylinder (Wrap IR forwarding LED wires twice before screwing stripped wire ends to 3 conductor Molex Euro Jack)
- Two (2) Laird Technologies 28A0640-0A2 Clamp-on Ferrite (Clamp around 0.8" diameter DVI Cable at the Quick-Connect DVI end)
- One (1) Laird Technologies HFA163090-0A2 Clamp-on Ferrite (Clamp around 0.8" diameter shielded DVI Cable at the Monitor end)
- One (1) Vaddio PowerRite™ 24 VDC, 2.0 Amp Power Supply
- One (1) 998-1001-232 EZCamera Control Adapter (for control systems)
- One (1) 998-1002-232 EZCamera Control Adapter (for TANDBERG VC systems) One (1) 3-pos Phoenix type connector
- One (1) CONCEAL Wall Mounting System and Mounting Hardware
- One (1) AC Cord Set for North America
- Documentation

(Note: The 999-6946-001 Int'l Version includes the Euro and UK power cables)

ClearVIEW HD-19 PTZ Camera, Front View with Feature Call-outs:



1) Camera and Zoom Lens:

The 19X optical zoom lens is built around a 1/3-type high-speed CMOS image sensor with a total of 1.3 Megapixels for precise HD video image acquisition.

2) Red Tally Light:

A red tally light is illuminated when the camera receives a VISCA command from an external control system.

3) IR Sensors:

IR sensors are built into the front of the ClearVIEW HD-19 to receive IR signals from the IR remote control supplied with the camera as well as other 3rd party remotes for the IR forwarding feature.

4) Blue Power Light:

A Vaddio blue power light is illuminated when the camera is turned on.

Compatible Vaddio Switchers and Joystick Controllers:



ProductionVIEW™ HD MV
(999-5625-000)



AutoPresenter
(999-5675-000)



Precision Camera Controller
(999-5700-000)

ClearVIEW HD-19 PTZ Camera, Rear View with Feature Call-outs:



5) RS-232 IN & IR Out:

The RS-232 accepts modified VISCA protocol for camera control, as well as transmits IR signaling received by the IR receivers, which can be transmitted to third party devices.

6) Dip Switch Settings:

Settings for IR remote, baud rate, SD output format, and image flip can be configured on these switches. See page 5 for additional information on switch settings.

7) HD Video Select:

A rotary switch allows the user to choose the component HD output video resolution and format. See page 6 for additional information on switch settings.

8) 12 VDC Input:

Power input for the standard, ClearVIEW HD-19 camera power supply.

9) YPbPr Output:

Component HD video is fed through the DB-15 connector. YPbPr and Composite signals are simultaneous. This is an HD camera and the SD signals are down converted and are really not the sweet spot of this camera.

10) Composite Video (CVBS) Output:

The CVBS output feeds out SD video signals and is configurable with the dip switches to choose between 480i/NTSC or 576i/PAL in 4:3 formats. Squeeze and letterbox modes are also available (see dipswitches 6&7).


11) EZ Power/Video Port:

This RJ-45 connector is only used with the Quick-Connect SR Interface and the Quick-Connect DVI-D/HDMI SR Interface to supply power and return HSDS video from the camera.

12) Slot for Optional Cards:

Optional slot cards can be plugged into the ClearVIEW HD-19 camera (the HD-SDI Slot Card and the EZIM CCU Slot Card are available separately).

Quick-Connect DVI/HDMI - SR Interface I/O Description

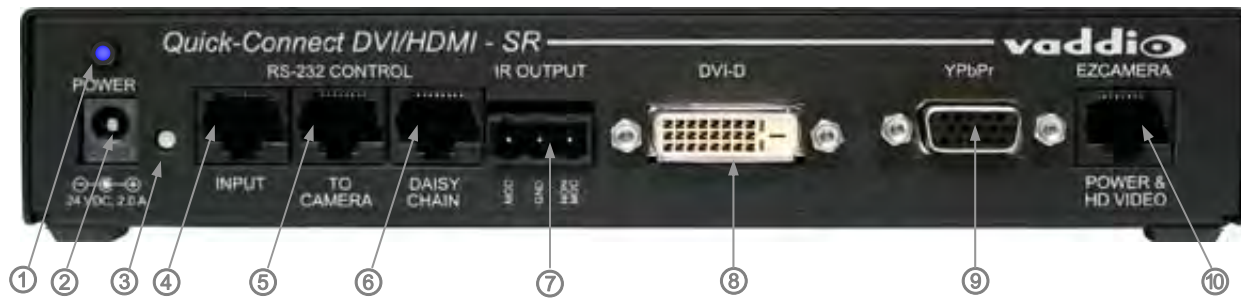

- 1) **Blue LED Power Indicator.**
- 2) **24 VDC Power Port:** Coax Power Connector, 5.5mm OD x 2.5mm ID, Positive Center.
- 3) **Recessed Color Space Conversion Switch:** Toggles between HDMI YCbCr and sRGB (RGBHV) color space. Change the color space to accommodate either YCbCr or RGBHV monitors.
- 4) **RS-232 Control Input** (from joystick controller, codec or control system).
- 5) **To Camera:** RS-232 Control to & from Camera and IR signals returned from the camera.
- 6) **Daisy Chain Control Port:** Daisy Chain Control Emulation (DCCE) output to next Quick-Connect DVI/HDMI SR Interface (does not function with the AutoTrak System).
- 7) **IR Output Port:** Non-modulated (for hard connections) and Modulated for use with IR emitters.
- 8) **DVI-D Output:** High Definition Multimedia Interface (HDMI) Transmitter, HDMI (v 1.3 with deep color) and DVI v 1.0 Compliant - use Recessed Color Space Conversion Switch to toggle between HDMI YCbCr and sRGB (RGBHV) color spaces to suit your monitors
- 9) **YPbPr Output:** Analog Component Video Output on DE-15F (HD-15F) Connector, Resolutions up to 1080p/60 with monitor support.
- 10) **EZCamera Power & HD Video Port:** Supplies power to camera and returns HD video from the camera via Cat-5e. Maximum distance on the Cat-5e cable is 100' (30.5 m).

Installation Basics:

The WallVIEW HD-19 product was designed for installation on a vertical wall surface with Cat-5e cable connectivity for Power, Video and Control signaling (two Cat-5e cables are required). Installation is simplified in that no custom 8-Pin mini-din cables or expensive coax plenum cables are needed and no power outlets are required near the camera bracket. All cabling is routed to the head-end using Cat-5e cables.

Before Installing:

- Locate the camera mounting location paying close attention to camera viewing angles, lighting conditions, possible line of site obstructions, and checking for in-wall obstructions where the camera is to be mounted. Pick a mounting location that will optimize the performance of the camera.
- The CONCEAL Wall Mounting System for the WallVIEW HD-19 can be mounted directly to a 2-gang wall box or can be mounted to the drywall using the supplied four (4) drywall anchors.

RS-232 Cabling:

For RS-232, use a standard Cat-5e cable and RJ-45 connectors (568B termination) from the RS-232 port on the back of a Vaddio camera controller or switcher. If the camera is connected to a third-party control system (such as AMX or Crestron), a DB-9 to RJ-45 control adapter cable is supplied. **Use of pass-thru type RJ-45 connectors is *highly discouraged*.** The Vaddio Cat-5e wiring standard uses pins 7 and 8 on both the video and the control Cat-5e cables. The pass-through connectors have proven to provide insufficient connectivity for these important signals. They are “ok” for voice and data, but not for video and control.

Videoconferencing Codecs and RS-232:


Depending on the codec and RS-232 port used, special DB-9 to RJ-45 adapters may sometimes be required. Refer to Vaddio's price list or website for Tech Notes on the WallVIEW HD-19 page on specific diagrams for wiring the camera to videoconferencing codecs. Any special adapters and configuration information will be noted.

Remember to always power up the cameras before booting up the codec.

First Time Set-up with the HD-19:

The ClearVIEW HD-19 was designed to be exceptionally easy to use and operate. There is documentation at the back of the manual for pin-outs for all of the connectors on the ClearVIEW HD-19 camera.

Step 1: Using the HD Video Select Rotary Switch and Camera Settings Dip Switch on the back of the camera, set up the camera's output resolution and functional preferences. There is a label on the bottom of the camera that identifies the choices.

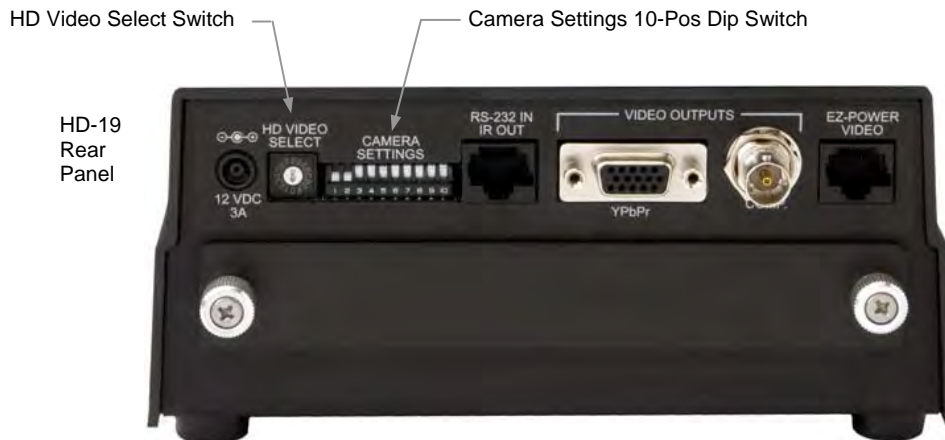

Label on the Bottom of HD-19

| DIP SWITCH SETTINGS | | | | | | | | | | HD VIDEO SELECT | | | |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|-----------------|------------|---|----------|
| IR 1 1 & 2 UP | IR OUT OFF | 9600 bps | SD NTSC | SD 4:3 6 & 7 UP | IMAGE FLIP OFF | TEST BARS OFF | 10 OFF | 0 | 720p/59.94 | 8 | 576i/25 | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 1 | 1080i/59.94 | 9 | --- | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 2 | 1080p/59.94 | A | --- | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 3 | 1080p/60 | B | --- | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 4 | 720p/50 | C | --- | | |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 5 | 1080i/50 | D | --- | | |
| IR 2 ON | IR 3 ON | ON | 38400 bps | SD PAL | SD SQ | SD LB | ON | ON | ON | 6 | 1080p/50 | E | 1080p/30 |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 7 | 480i/29.97 | F | 1080p/25 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | | | | |


- Set the HD output resolution for the camera with the Rotary Switch.
- Set the IR frequency of the camera if it is to respond to the IR remote control.
- If using RS-232 for control, leave the IR OUT OFF (SW3) and choose 9600bps
- If using the IR forwarding feature, turn the IR OUT ON (SW3).
- If inverting the camera, turn the IMAGE FLIP ON (SW8).

Dip Switch Settings:


- **IR 1 & 2:** The IR remote has the capability of operating up to three different PTZ cameras from one remote. Use the selector buttons at the top of the IR remote to select the frequency.
- **IR Out 3:** The IR output is sent out on the RS-232 RJ-45 jack on the back of the camera. Turning on the IR output will allow IR signals to be transmitted over the Cat-5e cable to the head end. When using RS-232 control or Vaddio CCU controllers (also via RS-232), turn the IR OUT to OFF.
- **Baud Rate 4:** The options for baud rate are either 9600 bps or 38,400 bps. Default is 9600 bps.
- **SD Format 5:** Choose between NTSC or PAL formats
- **SD Configurations 6 & 7:** SD video can be set to standard 4:3, squeeze mode or letterbox mode.
- **Image Flip 8:** To invert the HD-19, turn the IMAGE FLIP ON (switch down).
- **Test Bars 9:** Turning on the non-standard test bars will override the camera video output. These non-standard test bars are 75% IRE.
- **Switch 10:** Leave up - or in the OFF position

System Connectivity Example 1:

Basic system connectivity of a Vaddio WallVIEW™ DVI/HDMI HD-19 and Quick-Connect DVI/HDMI SR Interface with Vaddio ProductionVIEW™ Precision Camera Controller and PreVIEW HD Monitors.

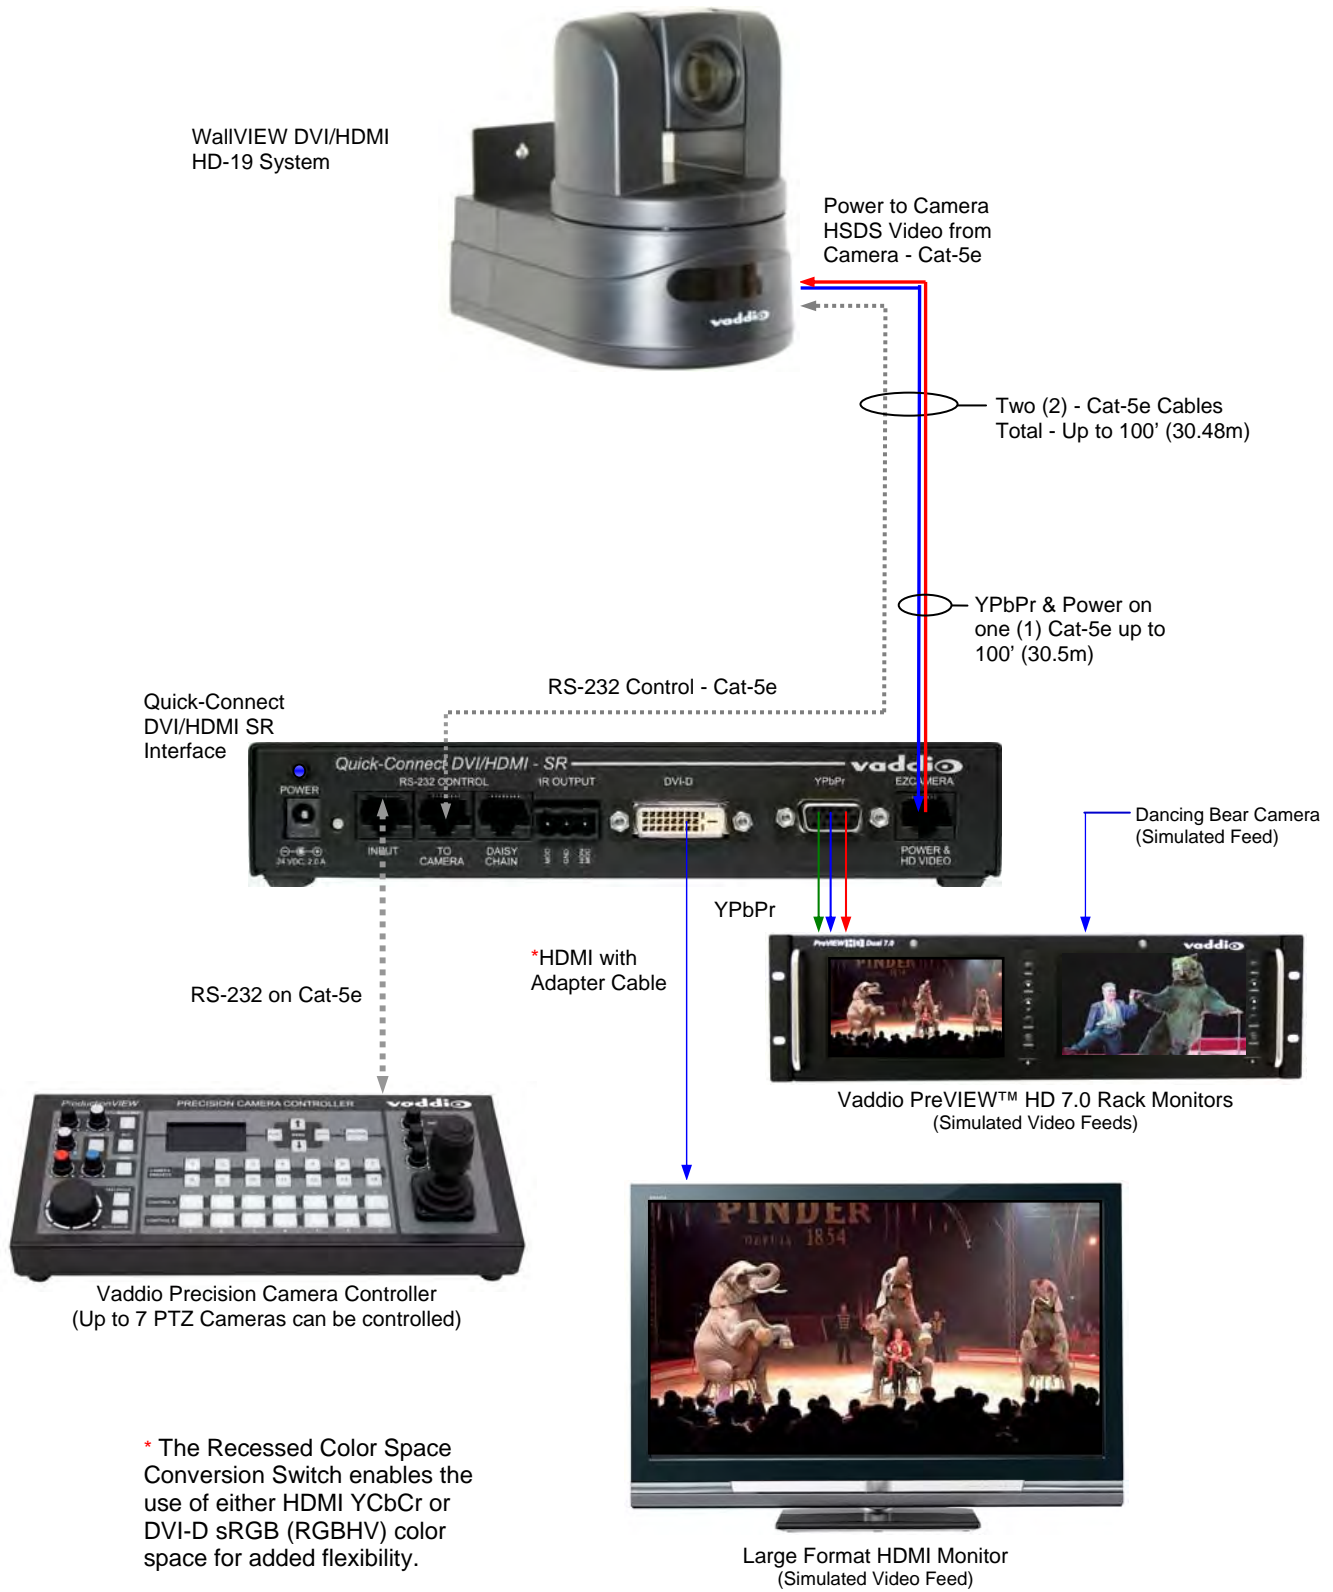

System Connectivity Example 2: System connectivity of two (2) Vaddio HD-19 cameras and two (2) Quick-Connect DVI/HDMI SR Interfaces configured with single control port codec and Daisy Chain Control Emulation (DCCE).

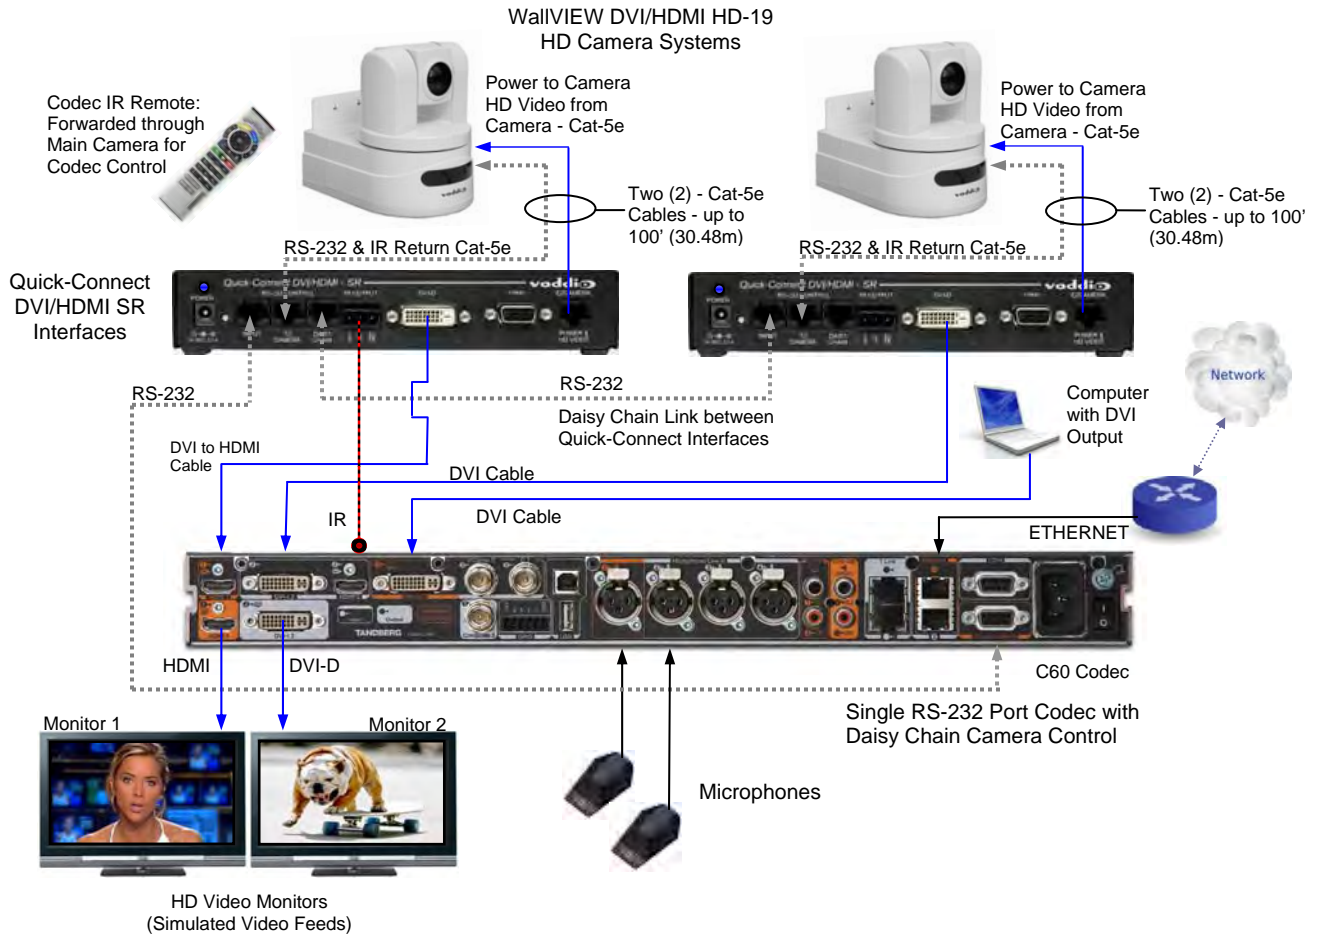

Mounting and Installation Instructions for the CONCEAL Wall Mounting System:

Step 1: Determine Camera Mount Location

Note: When locating the camera, consider viewing angles, lighting conditions, possible line of site obstructions and check for in-wall obstructions where the camera is to be mounted. Pick a mounting location to optimize the performance of the camera.

The 2 (two) Cat-5e cables should feed-through a 1" (25.4mm) opening (circular or square shape) centered in the rectangular slot located on the rear flange of the CONCEAL Wall Mount Bracket (see Fig. 1).



Note: Do not cut out the entire rectangular slot opening in the wall! This will not allow the two (2) lower wall anchors to correctly fasten the Conceal Wall Mount to the wall.

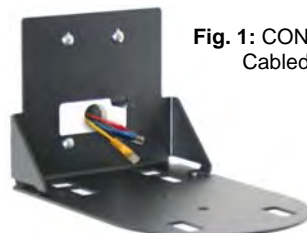


Fig. 1: CONCEAL Wall Mount Bracket: Cabled and Attached to Wall

If the bracket is to be mounted on a 2-gang wall box, use the screws supplied with the wall box cover plate to attach the CONCEAL Wall Mount Bracket.

If mounting to drywall with wall anchors, use the four (4) quality wall anchors/screws provided (see Fig. 1). The mounting holes are slotted and are 90° opposing to provide easy leveling. Level the mount and tighten the mounting screws.

Step 2: System Connectivity:

- 1) Use the accompanying HD-19 manual to set the switch settings for HD video out resolution, IR frequency and output, baud rate, SD video format and shape, image orientation etc...
- 2) See "Connectivity Example 1" on page 6. This is the basic two (2) Cat-5e cable system where Power is sent to the camera and HD Video is returned from the camera on one Cat-5e (blue line) and RS-232 control communication and IR feed-through is returned from the camera (dashed grey line):
 - a. Connect the first Cat-5e cable from the EZCAMERA POWER & HD VIDEO RJ-45 jack on the Quick-Connect to the EZ POWER VIDEO RJ-45 jack on the back of the camera
 - b. Connect the 2nd Cat-5e cable from the RS-232 CONTROL "TO CAMERA" port to the RS-232 IN/IR OUT jack on the back of the HD-19 camera. Connect the control source (i.e. Vaddio's Precision Camera Controller, ProductionVIEW HD, ControlVIEW™ XHD, AutoPresenter™ etc...) to the RS-232 CONTROL INPUT.
 - c. Connect the DVI-D output to a DVI-D video device (or HDMI with a DVI-D to HDMI adapter cable - sold separately) and/or connect the YPbPr output to a different video destination device. Both the DVI-D and the YPbPr are live images at the same resolution which is set at the camera. The only difference is that the DVI-D signal is digital and the YPbPr is analog. Both are capable of 1080p/60Hz.
 - d. Check all Cat-5e cables for proper connection and check the cables for continuity in advance of final connection. **Please do not use the "feed-thru" or "EZ" type RJ-45 connectors for professional installations (see page 3 for Important Safeguards).**



Note: Plugging the EZCAMERA POWER & HD VIDEO Cat-5e cable into the wrong RJ-45 may cause damage to the camera system and void the warranty.

Step 3: SECURE THE CAMERA TO THE CONCEAL WALL MOUNT BRACKET:

After all cables are attached to the camera, place the camera onto the camera mount and insert the two-(1/4"-20) screws into the camera through the two-screw holes in the bottom of the mount. **Note: Be sure to align each side of the camera evenly to all sides of the CONCEAL Wall Mount Bracket before final tightening of the mounting screws (see Fig. 2).**

Fig. 2: Vaddio HD-19 Camera aligned and attached to the CONCEAL Wall Mount Bracket



Step 4: INSTALL THE CONCEAL LOWER COVER PLATE:

Attach lower CONCEAL Lower Cover Plate (see Fig. 3). Slide lower cover plate from front of the mounting bracket toward the rear of the bracket. The two-rear locking tabs will need to be guided into position first and will lock in place as the lower cover plate is pushed toward the rear of the mounting bracket and the front tabs are inserted (see Fig. 4).

Fig. 3: CONCEAL Lower Cover Plate with Locking Tabs



Fig. 4: CONCEAL Lower Cover Plate locked in place



Step 5: CONNECT POWER AND TEST:

Connect the 24VDC, 2A power supply to the Quick-Connect and plug it into the wall once all the connections have been checked. The camera will “HOME” to a centered position. To ensure proper continuity of control and operation of the cameras, the RS-232 controller (control system, codec or joystick) should be powered ON after all of the cameras.



Note: Plugging the EZCAMERA POWER & HD VIDEO Cat-5e cable into the wrong RJ-45 may cause damage to the camera system and void the warranty.

Step 6: INSTALL THE CONCEAL REAR CAMERA COVER:

After successful testing of the camera, install the Conceal Rear Camera Cover on the CONCEAL Mounting Bracket with the supplied screw (see Fig. 5 and 6).

Fig. 5: CONCEAL Rear Camera Cover



Fig. 6: Completed CONCEAL Wall Mount Camera Bracket Installation



RS-232 Cabling

For RS-232, use a standard Cat-5e cable (568B termination for RJ-45 connectors) from the RS-232 port on the back of a Vaddio ProductionVIEW camera controller or switcher. If the camera will be connected to a third-party control system (such as AMX® or Crestron®), a DB-9 to RJ-45 adapter cable is supplied with the camera for RS-232.

Videoconference Codecs and RS-232

Depending on the codec that is used, and which RS-232 port is used with a codec, special DB-9 to RJ-45 adapters may sometimes be required. Refer to Vaddio’s price list or website for Tech Notes on the HD-19 page on specific diagrams for wiring the camera to videoconference codecs.

Remember to always power up the cameras before booting up the codec.

Step 7: Connect the HD Video Outputs (DVI or HDMI with adapter cable - or - analog HD YPbPr video) into a display device or video console. Please make sure that the video console or the display device is set up to receive the HD camera resolution that was chosen with the rotary switch on page 6. Most monitors are automatic, however all consoles will need set-up prior to termination.

Step 8: Connect the Vaddio 24 VDC, 2.0A power supply to the POWER Connector on the Quick-Connect and plug the power adapter into an AC outlet. Power will travel down the Power/Video Cat-5e cable to the camera. The camera will “Home” to a centered position, return HSDS video back to the Quick-Connect and is ready for control from the IR remote or RS-232 camera controller. **Boot Order: Always turn the cameras on first, then the controller or codec.**

Daisy Chain Configurations/Installation Instructions: In some cases, daisy chain control situations just can't be avoided. Because of this, Vaddio added "Daisy Chain Control Emulation" or DCCE™ to the Quick-Connect DVI/HDMI - SR Interface in order to use the HD-19 camera in these situations. See Connectivity Example 2 (previous page) where the codec requires daisy chain control wiring.

- 1) For daisy chain control, first complete steps above, since all the cabling between the camera and the Quick-Connect DVI/HDMI Interface is the same.
- 2) Instead of running a cable from the 1st camera to the 2nd camera, run a Cat-5e patch cable from the 1st Quick-Connect DVI/HDMI Interface's RS-232 CONTROL DAISY CHAIN RJ-45 jack, to the 2nd Quick-Connect DVI/HDMI SR Interface's RS-232 CONTROL INPUT RJ-45 jack.
- 3) Within the modified VISCA® protocol that the codec and the HD-19 use, the 1st in the chain will set up as Camera #1, the second will set up as Camera #2 in the chain, allowing the codec IR remote to select which camera it will switch to and which to control.
- 4) In the case of TANDBERG codecs, use the IR Modulated output of the Quick-Connect and a Xantech IR emitter (282D or 283D) and attach the emitter to the front panel of the codec (in front of the IR receiver).
- 5) Polycom codecs with IR receivers can connect the IR feed-through the same way as the TANDBERG, but do not use daisy chain control. Several Polycom codecs can also be connected directly with the non-modulated signal to the codec's IR signal input port.

Basic Daisy Chain Connectivity:



General Specifications:

| WallVIEW DVI/HDMI HD-19 | |
|--|---|
| Part Numbers | WallVIEW HD-19 (North America) P/N: 999-6946-000 (Black), 999-6946-000AW (Arctic White) WallVIEW HD-19 (International) P/N: 999-6946-001(Black), 999-6946-001AW (Arctic White) |
| Vaddio HD-19 | |
| Image Sensor | 1/3-Type Exmor High-speed, Progressive Scan CMOS Sensor with 1.3 Megapixels |
| Video Output Resolutions | HD: 1080p/60/59.94/50/30/25, 1080i/59.94/50, 720p/59.94/50 SD: 480i/NTSC & 576i/PAL (Crop, Squeeze or Letterbox mode) Color: The Recessed Color Space Conversion Switch enables the use of either HDMI YCbCr or DVI-D sRGB (RGBHV) color space for added flexibility. |
| Lens/ Focal Length | 19X Optical Zoom, F=4.5mm wide to 85mm tele end (F1.6-F2.9), Min. Focus Distance 1.0m |
| Horizontal Viewing Angle | 58.1° Wide End to 3.2° Tele End - 16:9 Format |
| Video S/N Ratio | >52 dB |
| Minimum Illumination | 0.7 LUX (F1.6, 50IRE) |
| Serial Control Protocol | RS-232 (Modified VISCA) |
| Pan Range | Pan: +170 degrees to -170 degrees, Tilt: +90 degrees to -30 degrees, Invertible for Ceiling Mount |
| Preset Positions | 16 (internal), 6 recalled via IR Remote |
| Tally Light | Available through RS-232 Control |
| Connectors | <ul style="list-style-type: none"> 12 VDC Power Input: EIAJ-04 Coaxial Power Connector HD Video Outputs: YPbPr on DE-15 (D-Sub 15-pin HD) SD Video Output: BNC Connector RS-232/IR Out: RJ-45 Jack (RS-232 Communication and IR Out (with Quick-Connect -SR Interfaces) EZ Power HD Video: RJ-45 Jack, for use with Quick-Connect SR Interface or Quick-Connect DVI/HDMI SR Interface. Supplies power to the camera and returns HD video from the camera to the Quick-Connect - SR Systems. |
| HD Video Select | 16-Position Rotary Switch: Used to set HD Video Resolution Output |
| Camera Settings | 10-Position Dip Switch: Settings for IR Select, Baud Rate 9600, Image Flip, SD LB and SQ, Test Bars OSD (On Screen Display) for fine tuning |
| Accessories | EZIM HD-SDI Slot Card PN# 998-6900-007 EZIM CCU Slot Card PN# 999-6900-006 - For Use with Quick-Connect CCU Only |
| Operating Temperature | 32° to 104° F (0° to 40° C) / 20% to 80% Relative Humidity |
| Dimensions (H x W x D) | 8.5" (215.9mm) H x 6.75" (171.45mm) W x 7.7" (195.58mm) D |
| Weight | 5.79 lbs. (2.625635463kg.) |
| Quick-Connect DVI/HDMI SR (Short Range) Interface | |
| Connectors | <ul style="list-style-type: none"> Power Connector: 5.5mm OD, 2.5mm ID coaxial connector RJ-45: Four (4) Control IN, Control OUT, Daisy Chain OUT, EZCamera Power Video Port Video Output: DE-15 connector for HD Analog Component (Y,PB,PR) video only (No SD Support) IR Output: Transmits modulated or non-modulated IR signals received from the HD-19 IR receiver Video Outputs: DVI-D (Female - Single Link) or HDMI with adapter cable (using the Recessed Color Space Conversion Switch) , DE-15F (High Density D-Sub 15-Pin F) for HD YPbPr |
| Cat-5e Cable Distance | Up to 100' (30.5m) |
| Power Supply | 24 VDC, 2 Amp |
| Dimensions / Weight | 1.6" (40.64mm) H x 8" (203.2mm) W x 6.751" (171.45mm) D, ½-Rack Size / 1.21 lbs. (0.548846804 kg) |
| Accessory Options | 1-RU Rack Mount Panel for two (2) units (side by side): P/N: 998-6000-003 1m (3.3') DVI-D Male to HDMI Male P/N: 440-5643-001 3m (10') DVI-D Male to HDMI Male P/N: 440-5643-003 |
| CONCEAL Wall Mounting System for Vaddio ClearVIEW HD-19 | |
| Dimensions | 5.125" H x 6.75" W x 10" D (13 cm x 17.15 cm x 25.4 cm) |
| Weight | Approx. 2.4 lbs. (1.1kg) |

Compliance and CE Declaration of Conformity - ClearVIEW HD-19

Compliance testing was performed to the following regulations:

- | | |
|---|---------|
| • FCC Part 15, Subpart B | Class A |
| • ICES-003, Issue 4: 2004 | Class A |
| • EN 55022 A: 2006 + A1: 2007(CISPR 22:2005/A1:2005) | Class A |
| • AS/NZS CISPR 22: 2009 + A1: 2010 | Class A |
| • VCCI V-3/2010.04 | Class A |
| • EMC Directive 2004/108/EC | Class A |



FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Standard(s) To Which Conformity Is Declared:

- | | |
|---|---|
| EMC Directive 2004/108/EC | |
| EN 55024: 1998 + Amendments A1: 2001 + A2: 2003 | Immunity |
| • EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001 | Electrostatic Discharge |
| • EN 61000-4-3: 2006 + A1: 2008 | Radiated Immunity |
| • EN 61000-4-4: 2004 + Corrigendum 2006 | Electrical Fast Transients |
| • EN 61000-4-5: 2006 | Surge Immunity |
| • EN 61000-4-6: 2009 | Conducted Immunity |
| • EN 61000-4-8: 2010 | Power Frequency Magnetic Field |
| • EN 61000-4-11: Second Edition: 2004 | Voltage Dips, Interrupts and Fluctuations |

Compliance and CE Declaration of Conformity - Quick-Connect DVI/HDMI SR Interface

Compliance testing was performed to the following regulations:

- **FCC Part 15, Subpart B**
- **ICES-003, Issue 4: 2004**
- **European Standard EN 55022 A: 2006 + A1: 2007(CISPR 22:2005/A1:2005)**
- **EMC Directive 2004/108/EC**

Class A
Class A
Class A
Class A



FCC Part 15 Compliance

- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.
- Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.
- Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.



ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.



European Compliance

This product has been evaluated for Electromagnetic Compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Ferrite cylinders are included in order to the Quick-Connect DVI/HDMI SR Interface to strictly comply with the European Community EMC Directives compliance. Use these ferrites to ensure the elimination of possible EMI interference from cell phones and AC motors.

Standard(s) To Which Conformity Is Declared:

EMC Directive 2004/108/EC

EN 55022 A: 2006 + A1 2007 (CISPR 22:2005/A1:2005) Conducted and Radiated Emissions

EN 55024: 1998 + Amendments A1: 2001 + A2: 2003 - Electromagnetic Compatibility - Immunity

- EN 61000-4-2** Electrostatic Discharge
- EN 61000-4-3** Radiated Immunity
- EN 61000-4-4** Electrical Fast Transients
- EN 61000-4-5** Surge Immunity
- EN 61000-4-6** Conducted Immunity
- EN 61000-4-8** Power Frequency Magnetic Field
- EN 61000-4-11** Voltage Dips, Interrupts and Fluctuations

WARRANTY INFORMATION

(See Vaddio Warranty Policies posted on vaddio.com for complete details):

Hardware* Warranty: One year limited warranty on all parts. Vaddio warrants this product against defects in materials and workmanship for a period of one year from the day of purchase from Vaddio. If Vaddio receives notice of such defects during the warranty period, they will, at their option, repair or replace products that prove to be defective.

Exclusions: The above warranty shall not apply to defects resulting from: improper or inadequate maintenance by the customer, customer applied software or interfacing, unauthorized modifications or misuse, operation outside the normal environmental specifications for the product, use of the incorrect power supply, improper extension of the power supply cable or improper site operation and maintenance.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty and is found to be defective. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted through one of the following resources: e-mail support at support@vaddio.com or online at www.vaddio.com.

Return Material Authorization (RMA) Number: Before returning a product for repair or replacement, request an RMA from Vaddio's technical support. Provide a technician with a return phone number, e-mail address, shipping address, and product serial numbers and describe the reason for repairs or returns as well as the date of purchase and proof of purchase. Include your assigned RMA number in all correspondence with Vaddio. Write your assigned RMA number on the shipping label of the box when returning the product. All returns are subject to a restocking fee without exception (see warranty policies at vaddio.com).

Voided Warranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, or unauthorized repair. Cutting the power supply cable on the secondary side (low voltage side) to extend the power to the device (camera or controller) voids the warranty for that device.

Shipping and Handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

Products Not Under Warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

*Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Other General Information:

Care and Cleaning

Do not attempt to take this product apart at any time. There are no user-serviceable components inside.

- Do not spill liquids or liquid type substances onto the device.
- Keep this device away from food or liquid.
- For smears or smudges on the devices, wipe with a clean, soft cloth.
- Do not use any abrasive pads or caustic chemicals at any time on any Vaddio equipment.


Operating and Storage Conditions:

Do not store or operate the device under the following conditions:

- Temperatures above 40°C (104°F) or temperatures below 0°C (32°F)
- High humidity, condensing or wet environments
- In inclement weather
- Dusty environments
- In a swimming pool or the beach
- Dry environments with an excess of static discharge
- In a space/time vortex
- Under severe vibration

Appendix 1: YPbPr Video Pin-Out for the HD-19 Camera and Quick-Connect SR Interface

| Pin | YPbPr |
|-----|--------|
| 1 | Pr |
| 2 | Y |
| 3 | Pb |
| 4 | - |
| 5 | - |
| 6 | Pr GND |
| 7 | Y GND |
| 8 | Pb GND |
| 9 | - |
| 10 | - |
| 11 | - |
| 12 | - |
| 13 | - |
| 14 | - |
| 15 | - |

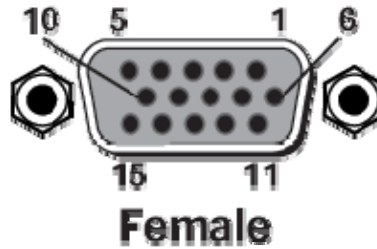


EZCamera Power & HD Video RJ-45 Connector Pin-outs




The EZCamera Power and HD Video RJ-45 Connector is for use with either the **Quick-Connect SR Interface** or the **Quick-Connect DVI/HDMI SR Interface ONLY** (568B Wiring Standard). The video signals are differential (HSDS™) and can only be received by the interfaces above.

| Pin | YPbPr |
|-----|--------|
| 1 | Power+ |
| 2 | Power- |
| 3 | Y+ |
| 4 | Pb+ |
| 5 | Pb GND |
| 6 | Y GND |
| 7 | Pr+ |
| 8 | Pr- |

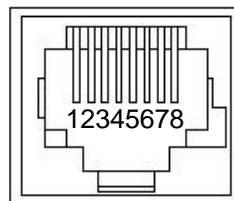


Appendix 2: ClearVIEW HD-19 Dimensions

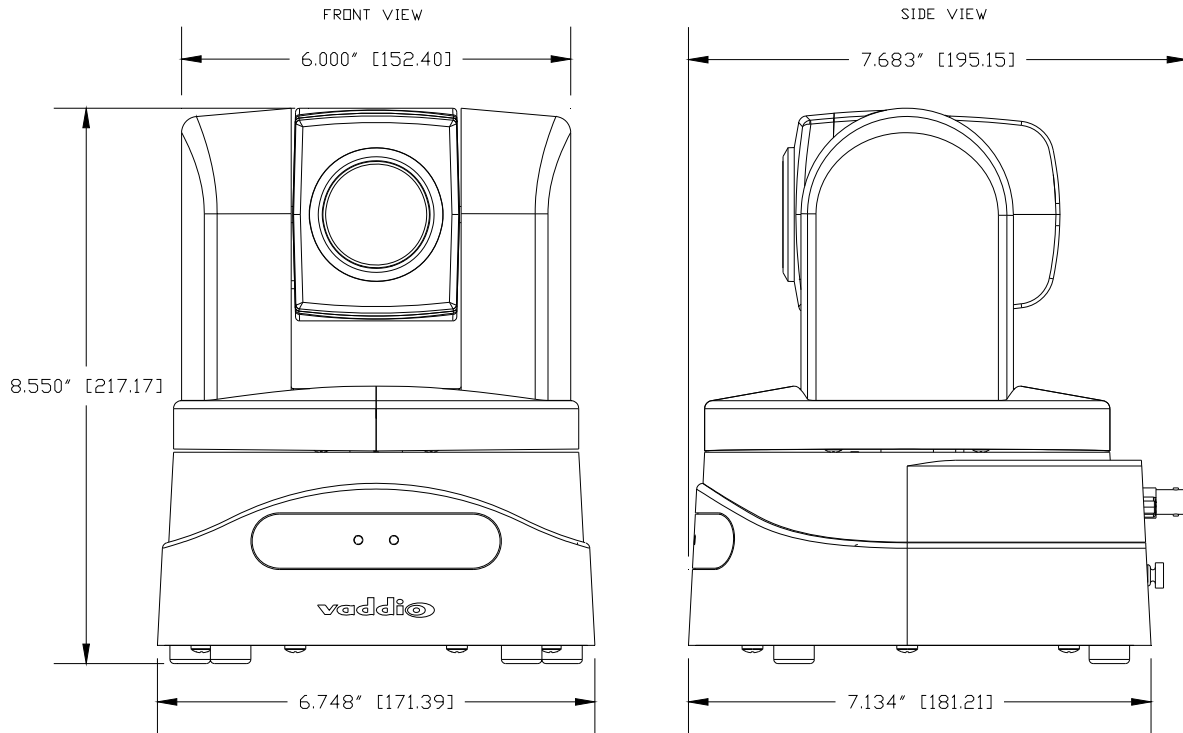

Appendix 3: Communication Specification

Communication Speed: 9600 bps (default)
 Start bit: 1
 Stop bit: 1
 Data bits: 8
 Parity: None
 No Flow control

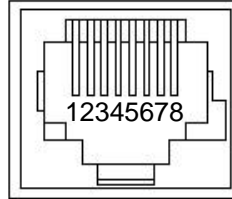

| Pin # | RJ-45 RS-232 and IR Out Pins |
|-------|---|
| 1) | Unused |
| 2) | Unused |
| 3) | Unused |
| 4) | IR Output (Diff Signal to Quick-Connect SR) |
| 5) | IR Ground (Diff Signal to Quick-Connect SR) |
| 6) | GND (GND of IR Short Range - Pin 3) |
| 7) | RXD (from TXD of control source) |
| 8) | TXD (to RXD of control source) |

NOTE: The Vaddio ClearVIEW HD-19 Control Protocol is similar, but not identical to the Sony® VISCA™ command set in order to be compatible with several popular control devices. Not all VISCA commands are supported and there are many HD-19 specific commands in the following Command and Inquiry Lists.

HD-19 Command List (1/2)

| Command Set | Command | Command Packet | Comments |
|----------------|---|--|--|
| Address Set | Broadcast | 88 30 01 FF | Address Set (Daisy chain) |
| IF_Clear | Broadcast | 88 01 00 01 FF | IF Clear |
| Command Cancel | | 8x 2p FF | p:socket number(1,2) |
| CAM_Power | On Off(Standby) | 8x 01 04 00 02 FF 8x 01 04 00 03 FF | Power On/Off |
| CAM_Zoom | Stop Tele(Standard) Wide(Standard) Tele(Variable) Wide(Variable) Direct Direct(Variable) | 8x 01 04 07 00 FF 8x 01 04 07 02 FF 8x 01 04 07 03 FF 8x 01 04 07 2p FF 8x 01 04 07 3p FF 8x 01 04 47 0p 0q 0r 0s FF 8x 01 7E 01 4A 0v 0p 0q 0r 0s FF | pqrs: Zoom Position* v:(Speed) 0-7 |
| CAM_Focus | Stop Far(Standard) Near(Standard) Far(Variable) Near(Variable) AutoFocus ManualFocus Auto/Manual Direct | 8x 01 04 08 00 FF 8x 01 04 08 02 FF 8x 01 04 08 03 FF 8x 01 04 08 2p FF 8x 01 04 08 3p FF 8x 01 04 38 02 FF 8x 01 04 38 03 FF 8x 01 04 38 10 FF 8x 01 04 48 0p 0q 0r 0s FF | pqrs: Focus position* |
| CAM_WB | Auto Manual One Push WB | 8x 01 04 35 00 FF 8x 01 04 35 05 FF 8x 01 04 35 03 FF | |
| CAM_RGain | Reset Up Down Direct | 8x 01 04 03 00 FF 8x 01 04 03 02 FF 8x 01 04 03 03 FF 8x 01 04 43 00 00 0p 0q FF | pq:00-ff |
| CAM_BGain | Reset Up Down Direct | 8x 01 04 04 00 FF 8x 01 04 04 02 FF 8x 01 04 04 03 FF 8x 01 04 44 00 00 0p 0q FF | pq:00-ff |
| CAM_AE | Full Auto Manual Shutter Priority Iris Priority | 8x 01 04 39 00 FF 8x 01 04 39 03 FF 8x 01 04 39 0A FF 8x 01 04 39 0B FF | Auto Exposure Mode Manual Control Mode Shutter Priority Mode Exposure Priority Mode (default) |
| CAM_Iris | Reset Up Down Direct | 8x 01 04 0B 00 FF 8x 01 04 0B 02 FF 8x 01 04 0B 03 FF 8x 01 04 4B 00 00 0p 0q FF | pq(0x00-0x11) |
| CAM_Gain | Reset Up Down Direct | 8x 01 04 0C 00 FF 8x 01 04 0C 02 FF 8x 01 04 0C 03 FF 8x 01 04 4C 00 00 0p 0q FF | pq(0x00-0x24) |
| CAM_Bright | Reset Up Down Direct | 8x 01 04 0D 00 FF 8x 01 04 0D 02 FF 8x 01 04 0D 03 FF 8x 01 04 4D 00 00 0p 0q FF | pq(0x01-0x64) |

HD-19 Command List (2/2)

| Command Set | Command | Command Packet | Comments |
|-----------------------|--------------------------|---|--|
| CAM_Backlight | On | 8x 01 04 33 02 FF | |
| | Off | 8x 01 04 33 03 FF | |
| CAM_Aperture | Reset | 8x 01 04 02 00 FF | |
| | Up | 8x 01 04 02 02 FF | |
| | Down | 8x 01 04 02 03 FF | |
| | Direct | 8x 01 04 42 00 00 0p 0q FF | pg(0x00-0x1F) |
| CAM_Memory | Reset | 8x 01 04 3F 00 0p FF | |
| | Set | 8x 01 04 3F 01 0p FF | p:Memory No(=0-0xe) |
| | Recall | 8x01 04 3F 02 0p FF | pqrs:0x0000 – 0xFFFF |
| CAM_IDWrite | | 8x 01 04 22 0p 0q 0r 0s FF | |
| IR_Receive | On | 8x 01 06 08 02 FF | |
| | Off | 8x 01 06 08 03 FF | |
| | On/Off | 8x 01 06 08 10 FF | IR forwarding/Local IR |
| Pan-tiltDrive | Up | 8x 01 06 01 VV WW 03 01 FF | WW: Pan Speed (0x01-0x18) |
| | Down | 8x 01 06 01 VV WW 03 02 FF | VV:Tilt Speed(0x01-0x14) |
| | Left | 8x 01 06 01 VV WW 01 03 FF | |
| | Right | 8x 01 06 01 VV WW 02 03 FF | |
| | UpLeft | 8x 01 06 01 VV WW 01 01 FF | |
| | UpRight | 8x 01 06 01 VV WW 02 01 FF | |
| | DownLeft | 8x 01 06 01 VV WW 01 02 FF | |
| | DownRight | 8x 01 06 01 VV WW 02 02 FF | |
| | Stop | 8x 01 06 01 VV WW 03 03 FF | |
| | Absolute Position | 81 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF | YYYY: Pan Position** ZZZZ: Tilt Position** |
| | Home | 8x 01 06 04 FF | |
| | Reset | 81 01 06 05 FF | |
| | Tally | On | 8x 01 7E 01 0A 00 02 FF |
| Off | | 8x 01 7E 01 0A 00 03 FF | |
| Preset Pan Speed | Pan/Tilt/Zoom Speed | 81 01 7E 01 0B WW SS ZZ FF | WW: Pan Speed (0x01-0x18) SS:Tilt Speed(0x01-0x14) ZZ:Zoom Speed(0-7); |
| Motor Config | Hard Motor Stops | 8x 01 7E 01 70 00 00 FF | |
| | Soft Motor Stops | 8x 01 7E 01 70 00 01 FF | |
| BLK.Enhance | Pedestal | No Support | No Support |
| GMA.Enhance | Gamma | 8x 01 7E 54 00 00 0p 0q FF | pg: Gamma (0x00-0x10) |
| CRM.Enhance | Chroma | 8x 01 7E 55 00 00 0p 0q FF | pg: Chroma (0x00-0x64) |
| KNE.Enhance | Knee | No Support | No Support |
| DIS.Enhance | Digital Image Stabilizer | 8x 01 7E 57 02 FF 8x 01 7E 57 03 FF | On Off |
| | SNR.Enhance | Super Noise Reduction | 8x 01 7E 58 02 FF 8x 01 7E 58 03 FF |
| AGC.Enhance | AGC Mode | 8x 01 7E 59 00 FF | Off |
| | | 8x 01 7E 59 01 FF | Low |
| | | 8x 01 7E 59 02 FF | Medium |
| | | 8x 01 7E 59 03 FF | High |
| CAM_Shutter | Reset | 8x 01 04 0A 00 FF | |
| | Up | 8x 01 04 0A 02 FF | |
| | Down | 8x 01 04 0A 03 FF | |
| | Direct | 8x 01 04 4A 00 00 0p 0q FF | pg(0x00-0x23) |
| CAM_ExpComp | On | 8x 01 04 3E 02 FF | AutoExposure Off |
| | Off | 8x 01 04 3E 03 FF | AutoExposure On |
| | Reset | 8x 01 04 0E 00 FF | |
| | Up | 8x 01 04 0E 02 FF | |
| | Down | 8x 01 04 0E 03 FF | |
| | Direct | 8x 01 04 4E 00 00 0p 0q FF | Pq: 0x00-0x24 |
| CAM_ICR Cut Filter | ICR On | 8x 01 04 01 02 FF | ICR On - Cut Filter Out |
| | ICR Off | 8x 01 04 01 03 FF | ICR Off - Cut Filter In |

*Zoom and Focus Data:

CAM_Zoom: Range(0x000–0x6B3)
CAM_Focus: Range (0x000-0xC000) dependent on Zoom Position

**Additional Information:

Pan Range: 8044 – 7FBC (-32,700 to +32,700)
Tilt Range: E891 – 4C2B (-5,999 to +19,499)
Actual Pan/Tilt ranges defined in Inquiry list

HD-19 Inquiry List (1/1)

| Inquiry Command | Command | Response Packet | Comments |
|-----------------------|-------------------|---|--|
| CAM_PowerInq | 8x 09 04 00 FF | y0 50 02 FF y0 50 03 FF | On Off(Standby) |
| CAM_ZoomPosInq | 8x 09 04 47 FF | y0 50 0p 0q 0r 0s FF | pqr: 0-0x6B3 |
| CAM_FocusPosInq | 8x 09 04 48 FF | y0 50 0p 0q 0r 0s FF | pqrs: Focus Position |
| CAM_WBModelInq | 81 09 04 35 FF | y0 50 00 FF y0 50 05 FF y0 50 03 FF | Auto Manual One Push WB |
| CAM_RGain | 8x 09 04 43 FF | y0 50 00 00 0p 0q FF | pq:000-Off |
| CAM_BGain | 8x 09 04 44 FF | y0 50 00 00 0p 0q FF | pq:000-Off |
| CAM_Iris | 8x 09 04 4B FF | y0 50 00 00 0p 0q FF | pq(0x00-0x11) |
| CAM_Gain | 8x 09 04 4C FF | y0 50 00 00 0p 0q FF | pq(0x00-0x24) |
| CAM_Bright | 8x 01 04 4D FF | y0 50 00 00 0p 0q FF | pq(0x01-0x64) |
| CAM_BacklightModelInq | 8x 09 04 33 FF | y0 50 02 FF y0 50 03 FF | On Off |
| CAM_ApertureInq | 8x 09 04 42 FF | y0 50 00 00 0p 0q FF | Pq:x00-0x1F |
| CAM_MemoryInq | 8x 09 04 3F FF | y0 50 0p FF | p:Preset 0-0xf |
| CAM_IDInq | 8x 09 04 3F FF | y0 50 0p 0q 0r 0s FF | pqrs:0x0000 – 0xFFFF |
| CAM_ReceiveInq | 8x 09 06 08 FF | y0 50 02 FF y0 50 03 FF | On Off |
| Pan-TiltMaxSpeedInq | 8x 09 06 11 FF | y0 50 pp qq FF | pp:Pan 0x01-0x18 qq:Tilt 0x01-0x14 |
| Pan-tiltPositionInq | 8x 09 06 12 FF | FF y0 50 0p 0p 0p 0p 0q 0q 0q 0q FF | pppp: Pan 0x8044-0x7FB2 qqqq: Tilt 0xE890-0x4C2C |
| TallyInq | 8x 09 7E 01 0A FF | y0 50 02 FF y0 50 03 FF | On Off |
| PresetSpeedInq | 8x 09 7E 01 0B FF | y0 50 pp qq rr FF | pp:Pan 0x01-0x18 qq:Tilt 0x01-0x14 rr:Zoom 0x00-0x07 |
| Motor Config | 8x 09 7E 01 70 FF | y0 50 00 FF y0 50 01 FF | Hard Motor Stops Soft Motor Stops |
| BLK.Enhance | No support | No Support | Pedestal |
| GMA.Enhance | 8x 09 7E 54 FF | y0 50 00 00 0p 0q FF | pq: Gamma (0x00-0x10) |
| CRM.Enhance | 8x 09 7E 55 FF | y0 50 00 00 0p 0q FF | pq: Chroma (0x00-0x64) |
| KNE.Enhance | No support | No Support | Knee |
| DIS.Enhance | 8x 09 7E 57 FF | y0 50 02 FF y0 50 03 FF | On Off |
| SNR.Enhance | 8x 09 7E 58 FF | y0 50 02 FF y0 50 03 FF | On Off |
| AGC.Enhance | 8x 09 7e 59 FF | y0 50 00 FF y0 50 01 FF y0 50 02 FF y0 50 03 FF y0 50 04 FF | Off Low Medium High Manual AGC |
| CAM_AEModelInq | 8x 09 04 39 FF | y0 50 00 FF y0 50 03 FF y0 50 0A FF y0 50 0B FF | Auto Exposure Mode Manual Control Mode Shutter Priority Mode Exposure Priority Mode |
| CAM_ShutterPosInq | 8x 09 04 4A FF | y0 50 00 00 0p 0q FF | pq: 0x0-0x23 |
| CAM_ExpCompModelInq | 8x 09 04 3E FF | y0 50 02 FF y0 50 03 FF | On - AE Mode Off Off – AE Mode On |
| CAM_ExpCompPosInq | 8x 09 04 4E FF | y0 50 00 00 0p 0q FF | pq: ExpComp Pos |
| CAM_ICRModelInq | 8x 09 04 01 FF | y0 50 02 FF y0 50 03 FF | On - ICR filter Out Off – ICR filter In |

Appendix 3 (continued):**Iris Position:**

| Index | F-Stop (Iris Position) |
|-------|------------------------|
| 0x11 | F1.6 |
| 0x10 | F2.0 |
| 0x0F | F2.4 |
| 0x0E | F2.8 |
| 0x0D | F3.4 |
| 0x0C | F4.0 |
| 0x0B | F4.8 |
| 0x0A | F5.6 |
| 0x09 | F6.8 |
| 0x08 | F8.0 |
| 0x07 | F9.6 |
| 0x06 | F11.0 |
| 0x05 | F14.0 |
| 0x04 | F16.0 |
| 0x03 | F19.0 |
| 0x02 | F22.0 |
| 0x01 | F28.0 |
| 0x00 | Close |

Gamma Position:

| Index | Gamma value |
|-------|----------------|
| 0x10 | 1.00 |
| 0xF | 0.95 |
| 0xE | 0.90 |
| 0xD | 0.85 |
| 0xC | 0.80 |
| 0xB | 0.75 |
| 0xA | 0.70 |
| 0x9 | 0.65 |
| 0x8 | 0.60 |
| 0x7 | 0.55 |
| 0x6 | 0.50 |
| 0x5 | 0.45 |
| 0x4 | 0.40 |
| 0x3 | 0.35 (Default) |
| 0x2 | 0.30 |
| 0x1 | 0.25 |
| 0x0 | 0.20 |

Shutter Position(Speed):

| Index | Shutter (Speed) |
|-------|-----------------|
| 0x23 | 1/30000 |
| 0x22 | 1/10000 |
| 0x21 | 1/5000 |
| 0x20 | 1/2500 |
| 0x1F | 1/1500 |
| 0x1E | 1/1000 |
| 0x1D | 1/700 |
| 0x1C | 1/600 |
| 0x1B | 1/500 |
| 0x1A | 1/480 |
| 0x19 | 1/360 |
| 0x18 | 1/300 |
| 0x17 | 1/250 |
| 0x16 | 1/240 |
| 0x15 | 1/200 |
| 0x14 | 1/180 |
| 0x13 | 1/150 |
| 0x12 | 1/120 |
| 0x11 | 1/100 |
| 0x10 | 1/60 |
| 0x0F | 1/50 |
| 0x0E | 1/30 |
| 0x0D | x2 |
| 0x0C | x4 |
| 0x0B | x6 |
| 0x0A | x8 |
| 0x09 | x10 |
| 0x08 | x12 |
| 0x07 | x14 |
| 0x06 | x16 |
| 0x05 | x20 |
| 0x04 | x24 |
| 0x03 | x32 |
| 0x02 | x40 |
| 0x01 | x48 |
| 0x00 | x60 |

Inside Back Cover - Blank



9433 Science Center Drive, Minneapolis, MN 55428

Toll Free: 800-572-2011 ▪ Phone: 763-971-4400 ▪ FAX: 763-971-4464

www.vaddio.com